


07-13 Chevrolet 1500 Diamond Back Bumper Bolt Bag. No Lights Part # 100-20-7008, With Lights Part # 100-20-7009

07-10 Chevrolet 2500HD, 3500HD Diamond Back Bumper Bolt Bag. No Lights Part # 100-20-7010, With Lights Part # 100-20-7011, With Sensors Part# 100-20-7012, With Sensors & Lights Part# 100-20-7013

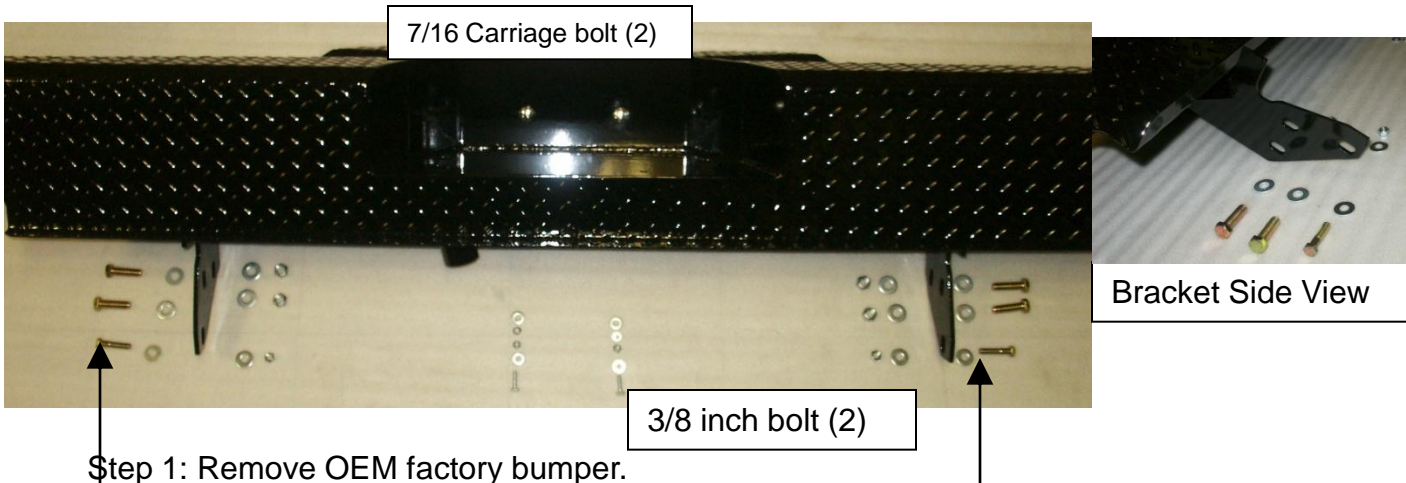

Step 1: Remove OEM factory bumper.

Step 2: Align Frontier bumper to inside of frame. (Note: During installation, guide OEM spare tire tube into the spare tire tube on Frontier bumper.) Install bolts from the inside of frame through the bracket and the frame using 3/8" and 1/2" bolts and washers. The 3/8" bolts are installed on the end of the bracket as highlighted in the picture.

Step 3: Attach original OEM factory receiver (that came on the vehicle) to the bottom of the drop using 7/16 carriage bolts, nuts and washers.

Step 4: If an impact is used, drive the bolt and hold the nut. To verify that the bolts are tight, check with a wrench by hand.

Note: Periodically check bolts to ensure that bolts remain tight. Also, before using with a trailer, check bolts to ensure that bolts are tight.

IF FACTORY SENSORS ARE BEING INSTALLED YOU MUST BE EXTREMELY CAREFULL NOT TO BREAK THE INTERIOR WIRES IN THE SENSORS!!

Bolt Bag Contents	
Quantity	Description
2	3/8" X 1-3/4 bolt
4	3/8" flat washer
2	3/8" Lock Washers
2	3/8" Hex nuts
4	1/2" X 1-3/4" bolts
8	1/2" flat washers
4	1/2" Lock Washers
4	1/2" Hex nuts
2	1/4" X 1" bolts (license plate)
2	1/4" hex nuts (license plate)
4	1/4" flat washers (license plate)
2	1/4" lock washers (license plate)
2	7/16 carriage bolts
2	7/16 Hex nuts
2	7/16 flat washers
46	Total Pieces