


**2011-2014 Chevrolet/GMC 2500HD, 3500HD
Diamond Back Bumper Bolt Bag. With Sensors
Part# 100-21-1012, With Sensors & Lights
Part# 100-21-1013**

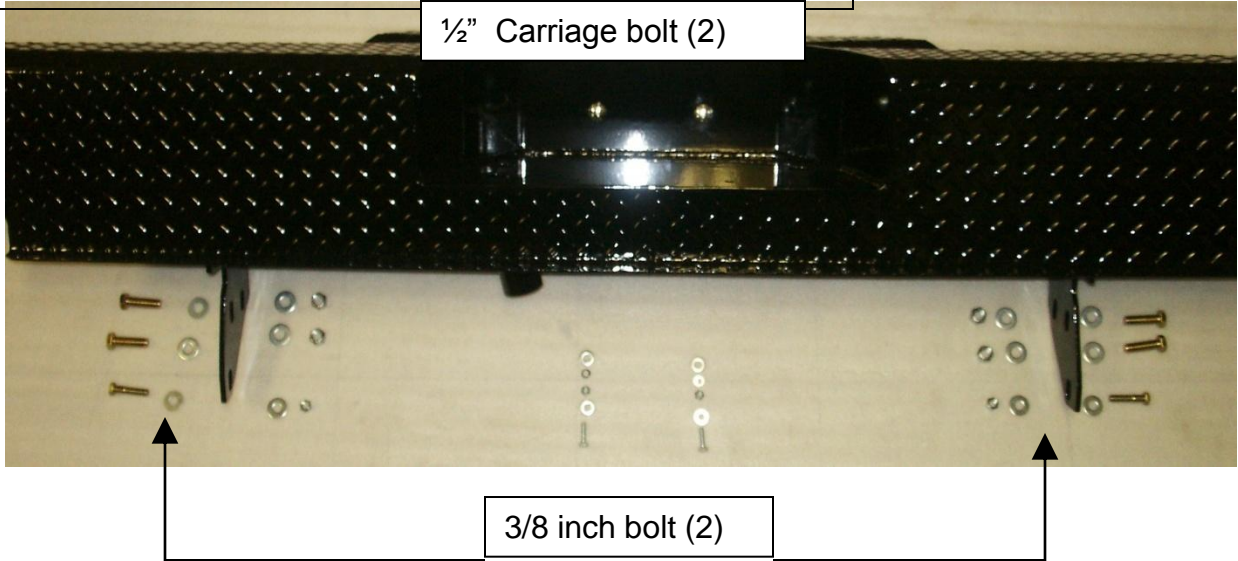

Step 1: Remove OEM factory bumper.

Step 2: Align Frontier bumper to inside of frame. (Note: During installation, guide OEM spare tire tube into the spare tire tube on Frontier bumper.) Install bolts from the outside of frame through the bracket and the frame using 3/8" and 1/2" bolts and washers. The 3/8" bolts are installed on the end of the bracket as highlighted in the picture.

Step 3: Attach original OEM factory receiver (that came on the vehicle) to the bottom of the drop using 1/2" carriage bolts, nuts and washers.

Step 4: If an impact is used, drive the bolt and hold the nut. To verify that the bolts are tight, check with a wrench by hand.

Note: Periodically check bolts to ensure that bolts remain tight. Also, before using with a trailer, check bolts to ensure that bolts are tight.

Bolt Bag Contents	
Quantity	Description
2	3/8" X 1-3/4 bolt
4	3/8" flat washer
2	3/8" lock nuts
4	1/2" X 1-3/4" bolts
8	1/2" flat washers
4	1/2" Hex nuts
6	1/2" lock Washers
2	1/4" X 1" bolts (license plate)
2	1/4" hex nuts (license plate)
4	1/4" flat washers (license plate)
2	1/4" lock washers (license plate)
2	1/2" carriage bolts
2	1/2" lock nuts
2	1/2" flat washers
2	1/2" X 1 1/2" Flat Washers
48	Total Pieces

Need Help? Call Frontier at
800.634.3086 or E-mail: info@frontier-gear.com