


03-08 Dodge 1500-3500 Diamond Back Bumper Bolt Bag. No Lights
Part # 100-49-8003, With Lights Part # 100-49-8004

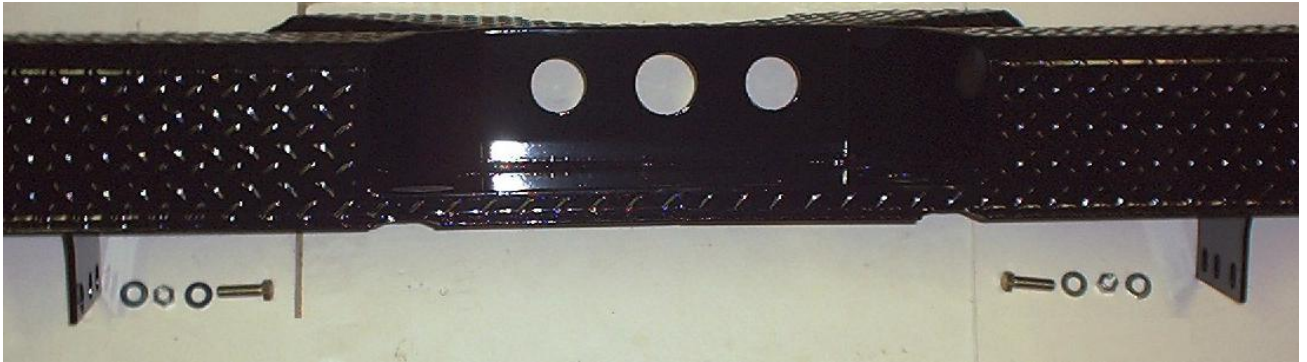

Step 1: Remove OEM factory bumper.

Step 2: Align Frontier bumper to outside of frame. Install bolts from the outside through the bracket and the frame.

Step 3: If an impact is used, drive the bolt and hold the nut. To verify that the bolts are tight, check with a wrench by hand.

Note: Periodically check bolts to ensure that bolts remain tight. Also, before using with a trailer, check bolts to ensure that bolts are tight.

Bolt Bag Contents	
Quantity	Description
2	1/2" X 1-3/4" bolts (1500 only)
2	7/16" X 1 1/2" Bolt
4	7/16" Flat Washer
2	7/16" Lock Nut
4	1/2" flat washers
2	1/2" Hex nuts
2	1/2" lock Washers
2	1/4" X 1" bolts (license plate)
2	1/4" hex nuts (license plate)
4	1/4" flat washers (license plate)
2	1/4" lock washers (license plate)
28	Total Pieces

Warning: Do not tow from bumper. Only tow from OEM factory receiver.