

2007-2014 Tahoe, Suburban 1500, Avalanche Grille Guard Installation Instructions. Part # 200-20-7003


Frame Horn Bracket

Passenger Driver



Bolt Bag Contents:

Quantity	Description
12	1/2" X 1 3/4" Bolts
24	1/2" Flat Washers
12	1/2" Lock Washers
12	1/2" Hex Nuts
2	steel plate w ashers
2	Frame Horn Brackets
64	Total Pieces

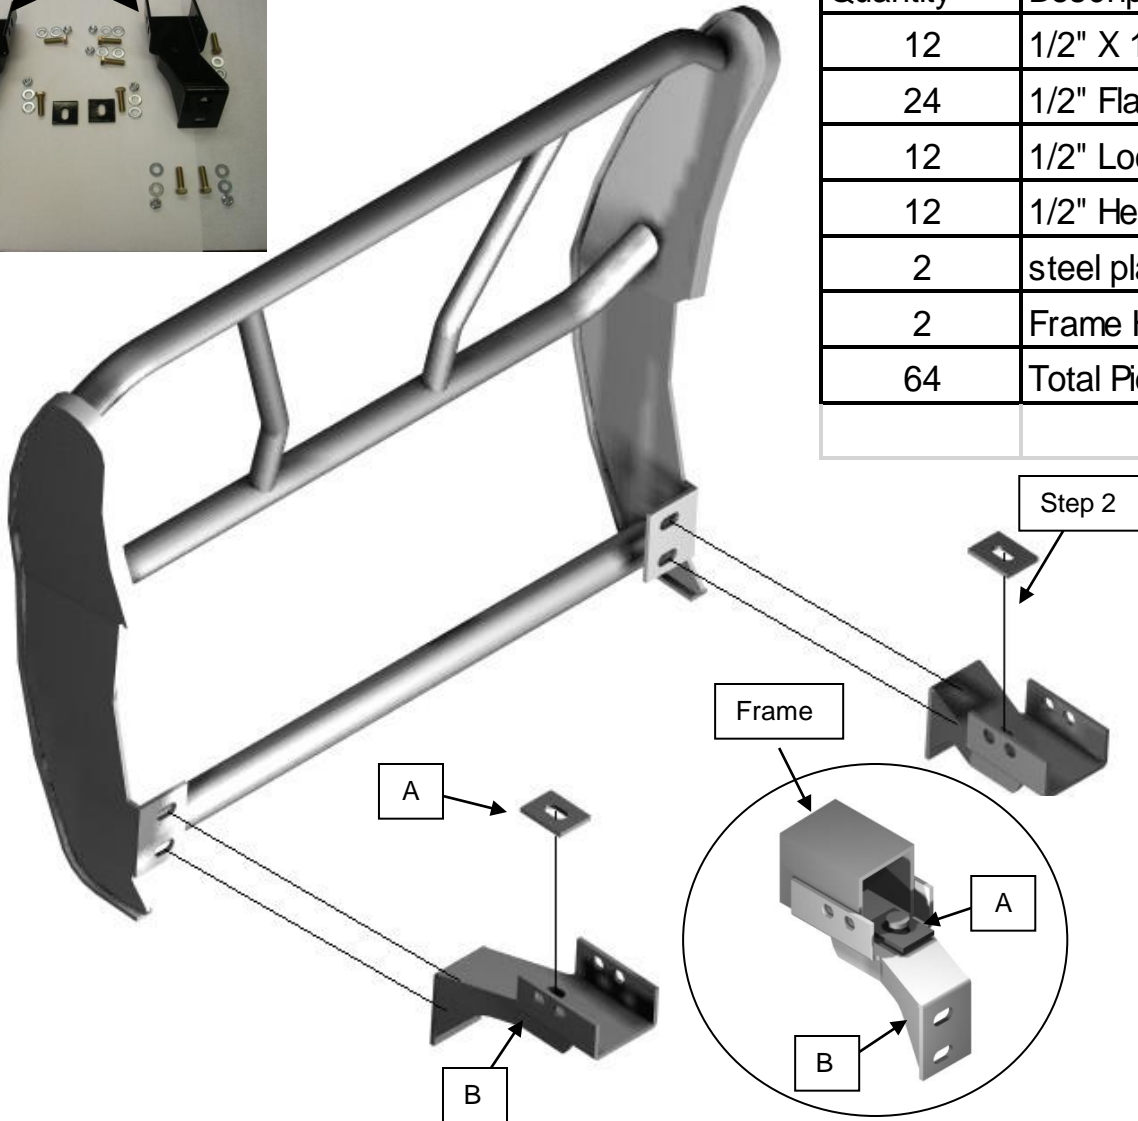

Step 1: Remove factory tow hook if the truck has one. Mount Frame Horn Bracket as shown in the picture using the (3) tow hook bolt holes. ATTENTION: space is tight so work from the back to front when putting in bolts!!

Step 2: In order to secure bracket as tight as possible you must install our 1/2" bolt through the pre-punched hole on top of the bracket and squeeze bracket tightly to the tip of frame using the steel plate provided as a washer.

Step 3: Once brackets are tight to vehicle frame you can attach the Grille Guard feet to the brackets using the provided bolts.

Step 4: Check alignment of Grille Guard to truck before tightening bolts on the feet.