


Headache Rack

Bolt Bag Contents	
Description	
1/4" X 1-1/2" Hex Bolt	
1/4" flat washers	
1⁄4" nuts	
1/4" lock washers	
Total Pieces	

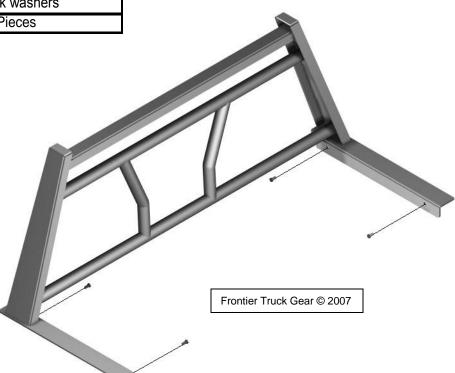

Step 1: Position and center headache rack on truck bed allow for space between rack and cab of truck.

Step 2: Drill four holes, as shown in picture, through angle plate and through truck bed lip. Be sure to avoid front stake pockets when drilling. Place two 1/4" bolts through the plate and truck bed

Step 3: Tighten all bolts.

Note: Periodically check bolts to ensure that bolts remain tight.