

55245

LEXUS LX 470
LEXUS RX 300
TOYOTA 4RUNNER
TOYOTA HIGHLANDER
TOYOTA LANDCRUISER

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

01/26/09

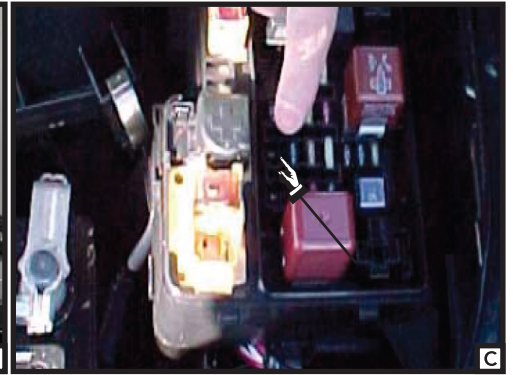

English

1. Locate the vehicles factory tow plug location (S6) behind the bumper. On some vehicles the tow plug will be hidden under a black box. remove the 10 mm hex bolts and temporarily remove cover to reveal the tow plug. [A][B]

2. Insert harness connector into vehicle harness. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location.

3. On the Highlander and RX300 locate the vehicles fuse panel on the drivers side of the engine compartment. Insert a 20 amp fuse in the location marked towing. [C]

4. Re-install anything removed during installation.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.



55245