


07-13 Chevrolet 1500 & 07-10 2500HD-3500HD FBR Installation Instructions. (1500) Part # 300-20-7009, (2500HD-3500HD)300-20-7005. XFBR (1500) Part # 600-20-7009, XFBR 2500HD-3500HD) 600-20-7005. SFBR (1500) 120-20-7009

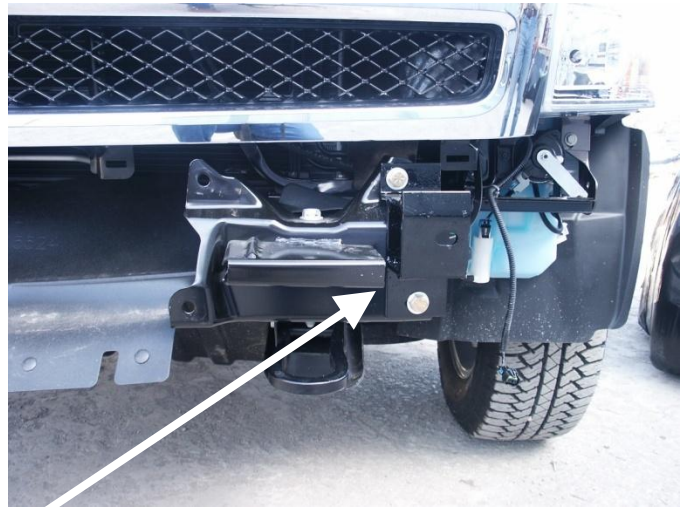

Step 1: Remove factory bumper. Note: Do not remove factory tow hooks.

Step 3


Step 2

Step 2: Install factory fog lights to front end using the 3/8" washers to hold light to steel bracket as shown in step 2.

Step 3: Install Frame support bracket to frame horn.

Step 4: Mount front end replacement (not shown) to frame horn support brackets (that was installed in step 3).

Step 5: Install bottom foot of Grille Guard to the outside tow hook bolts.

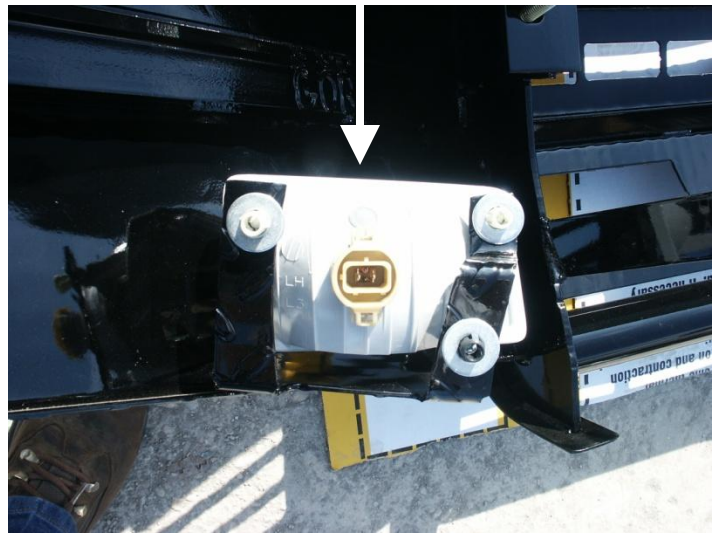

Step 6: Check alignment of front end replacement to truck and tighten all bolts.

Bolt Bag Contents:	
Quantity	Description
6	3/8" Flat Washer
6	1/2" X 1-3/4" bolts
12	1/2" flat washers
6	1/2" Lock Washers
6	1/2" Hex Nuts
2	1/4" X 1" bolts
2	1/4" nuts
4	1/4" flat washers
2	1/4" Lock Washers
46	Total Pieces

Need Help? Call Frontier at 800.634.3086 or E-mail info@frontier-gear.com.