



## AR Series Bull Bar

### FITMENTS

2007-2010 Chevrolet Silverado 2500HD/3500HD  
2007-2010 GMC Sierra 2500HD/3500HD

**STOP - Verify part and application is correct before proceeding.  
If missing part or damage item please customer service directly.**

**Call us at (909) 895-4522 Monday-Friday 9am-6pm PST  
Email us at [SUPPORT@ARMORDILLOUSA.COM](mailto:SUPPORT@ARMORDILLOUSA.COM)**

### **ARMORDILLO RECOMMENDS PROFESSIONAL INSTALLATION ON ALL THEIR PRODUCTS**

**WARNING:** When working on ,under or around vehicle exercise caution. If working without a lift check vehicle owners manual for correct jacking points. Always wear safety glasses and ensure a safe working area. Serious injury or death could occur if safety measures are not followed.

#### **PERIODICALLY CHECK TO ENSURE ALL FASTENERS ARE TIGHT AND ALL STRUCTURAL COMPONENTS ARE SOUND CARE**

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives, that could damage the finish.

For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish.  
Mild soap may be used to clean bull guard.

For color finishes: Regular waxing is recommended to add a protective layer over the finish.  
Mild soap may be used to clean the bull guard.


*ARMORDILLO products are designed as decorative accessories and should not be relied upon as protection for the vehicle or passengers. Buyers assume all risk and liability whatsoever resulting from installation and use of ARMORDILLO products. ARMORDILLO assumes no liability for injury, loss, incidental or consequential damages in the event of an accident.*

*ARMORDILLO guarantees the original purchaser a LIMITED 1 YEAR WARRANTY from date of purchase against manufactured defects in materials, workmanship and finish under normal use. This excludes damage resulting from road hazards, debris, product misuse, improper installation, impairments from accidents, neglect, shipping or product modification. This warranty applies only to new products and is limited to the repair or replacement of ARMORDILLO products. Warranty does not included cost of removal, installation, labor, freight, inconvenience, or consequential damage. Original purchaser must return defective merchandise to the original place of purchase and must provide the proof of purchase. v*

# Bill Of Materials:



HARDWARE			
QTY	DESCRIPTION	QTY	DESCRIPTION
1	Bull Bar	4	M10 x 30mm Hex Bolt
2	Driver / Passenger Upper Bracket	4	M10 Lock Washer
2	Driver / Passenger Lower Bracket	4	M10 Hex Nut
4	M8 x 25mm Hex Bolt	8	M10 Washer
4	M8 Lock Washer	4	M12 x 35mm Hex Bolt
4	M8 Washer	4	M12 Lock Washer
8	M12 Washer	4	M12 Hex Nut

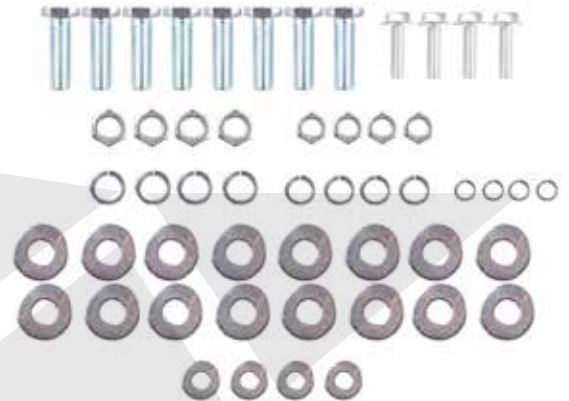

## TOOL REQUIRED

	SIZE	DESCRIPTION
	3/8"	Ratchet
	13/17 mm	Socket
	13/17 mm	Wrench



**LEVEL OF DIFFICULTY: EASY**

**PRO INSTALL TIME: 20 MIN.**

**NOVICE INSTALL TIME: 40 MIN.**

## INSTALLATION TIPS:

- 1) REMOVE CONTENTS FROM BOX, VERIFY ALL PARTS LISTED ARE PRESENT AND FREE OF DAMAGE. READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.
- 2) CUTTING OF LOWER VALANCE OR TRIM MAYBE REQUIRE, INSTALLATION MAY INTERFERE WITH FRONT SENSORS ON BUMPER.
- 3) TWO PERSON WILL BE REQUIRED WHEN MOUNTING AND ALIGNING BULL BAR
- 4) USING PROPER TOOLS WILL IMPROVE THE QUALITY OF THE INSTALL AND REDUCE THE TIME REQUIRED.
- 5) NEED HELP OR HAVE SOME QUESTIONS CALL US AT (909) 895-4522 OR EMAIL US AT [SUPPORT@ARMORDILLOUSA.COM](mailto:SUPPORT@ARMORDILLOUSA.COM)
- 6) REMOVAL OF FRONT LICENSE PLATE IS REQUIRED, RELOCATION OF FRONT LICENSE PLATE IS HIGHLY RECOMMENDED.
- 7) ANTI-SEIZE LUBRICANT IS HIGHLY RECOMMEND TO USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT DAMAGE TO THE THREAD AND GALLING.

### Hardware Reference Chart

	M6	M8	M10	M12	M14	M16
Socket size	10mm	13mm	17mm	19mm	22mm	24mm
Grade 8.8/8.9	102ft.lbs.	20ft.lbs.	40ft.lbs.	70ft.lbs.	110ft.lbs.	175ft.lbs.
Grade 10.9	144ft.lbs.	30ft.lbs.	60ft.lbs.	140ft.lbs.	165ft.lbs.	225ft.lbs.

**1)** From underside of vehicle, remove the two bolts holding the driver factory tow hook, then remove tow hook from vehicle. NOTE: This Bull Bar is not compatible with factory tow hooks, so you will not be reinstalling factory tow hooks back onto vehicle.

**2)** Determine driver and passenger Frame Brackets. NOTE: Refer to Figure above for bracket configuration. Position driver side Frame Bracket to the outside of the frame rail and secure using the included (2) 12mm x 35mm Hex Head Bolts, (2) 12mm lock Washers, (2) 12mm Hex Nuts, and (4) 12mm Flat Washers (Figure 1). Do not tighten at this time. Repeat steps 1 & 2 for passenger side Frame Bracket.

**3)** Loosely attach Bull Bar Brackets to Bull Bar using the included (4) 8mm x 25mm Hex Head Bolts, (4) 8mm Lock Washers, and (4) 8mm Flat Washers (Figure 2). Do not tighten at this time.

**4)** With help position Bull Bar assembly on the inner side of Frame Brackets. Attach Bull Bar Brackets to Frame Brackets using the included (4) 10mm x 30mm Hex Head Bolts, (4) 10mm Lock Nuts, (4) 10mm Hex Nuts, and (8) 10mm Flat Washers (Figure 3 & 4). Do not tighten at this time.

**5)** Level and adjust Bull Bar, then tighten all hardware at this time.

NOTE: If you can't reach the Bull Bar Bolts (8mm hardware) from behind of bumper and through tow hook cavity, some cutting might be necessary to the tow hook cavity in order to tighten the Bull Bar Bolts.

**6)** Do periodic inspections to the installation to make sure that all hardware is secure and tight.

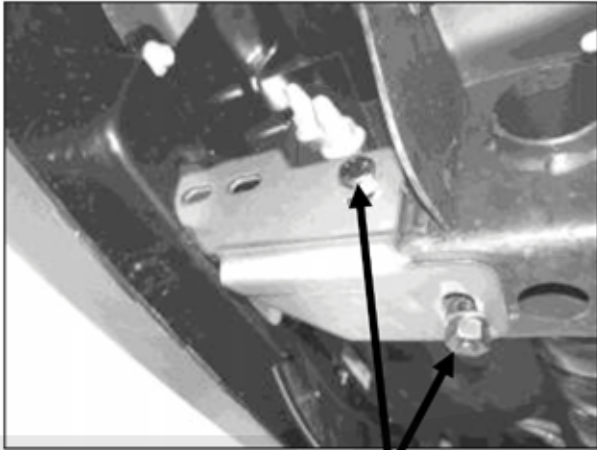


Figure 1

12mm x 35mm Hex Head Bolts  
12mm Lock Washers  
12mm Hex Nuts  
12mm Flat Washers

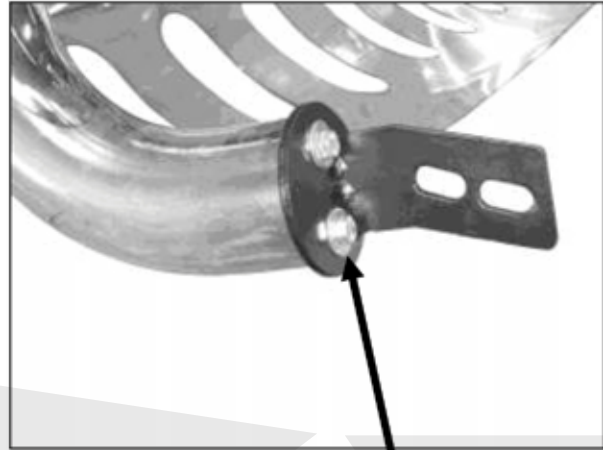


Figure 2

8mm x 25mm Hex Head Bolts  
8mm Lock Washers  
8mm Flat Washers

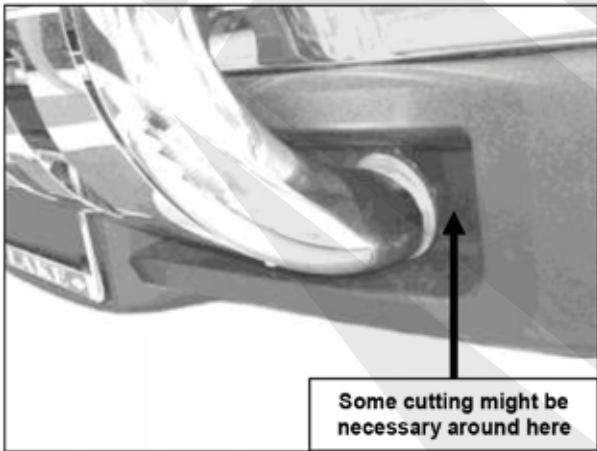


Figure 3

Some cutting might be  
necessary around here

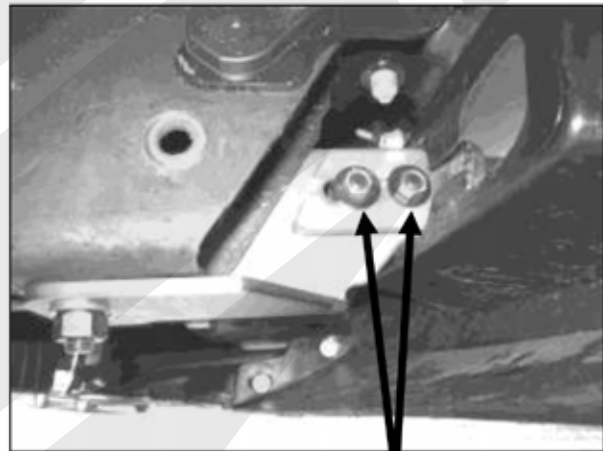


Figure 4

10mm x 30mm Hex Head Bolts  
10mm Lock Washers  
10mm Hex Nuts  
10mm Flat Washers