



Protecting Your Adventure Lifestyle


800009

FRONT SWAY BAR LINK W/BRACKET – JEEP TJ

INSTALLATION INSTRUCTIONS

Please read instructions before beginning installation. Check the kit hardware against the parts list. Be sure you have all needed parts and know where they go.

1. Mount the sway bar front mount bracket to the right front sway bar using the 7/16" hardware provided as shown in the illustration below.
2. Attach the front sway bar link as shown in the illustration below using the hardware provided. Torque the bolts to 30 ft./lbs.
3. Repeat for the left side of the vehicle.

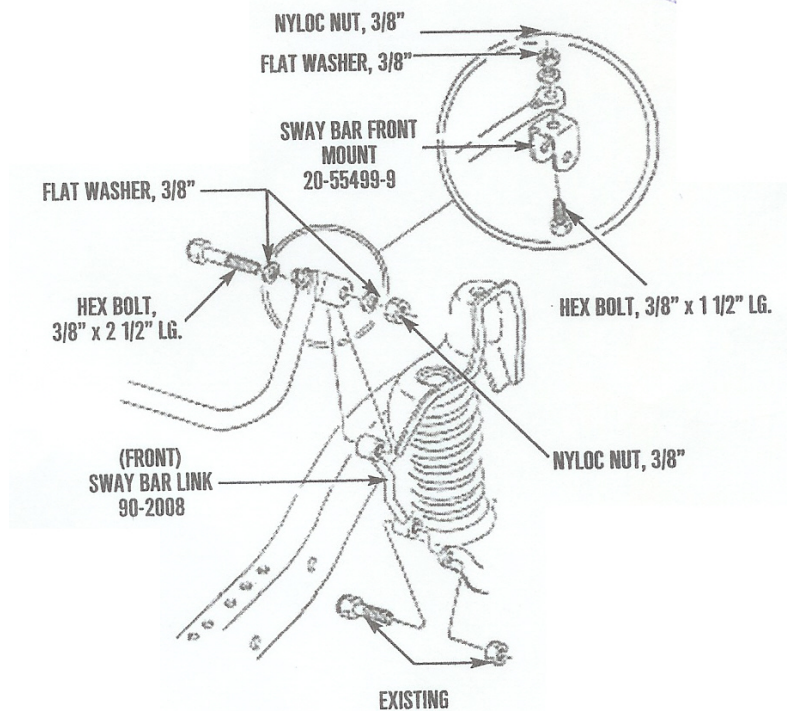

MAINTENANCE INFORMATION

It is the ultimate buyers responsibility to have all bolts/nuts checked for tightness after the first 100 miles. After that, check them every 1000 miles. Wheel alignment steering system, suspension and drive line systems must be inspected by a qualified professional mechanic at least every 3000 miles.

PARTS LIST

- Sway Bar Links #700028 (2)
- U-Brackets (2)

QUALITY • INTEGRITY • INNOVATION • SERVICE

Learn more about performance suspension parts we have.