

Preparation:

- Disconnect the negative battery terminal. Park the vehicle on level ground and set the emergency brake.
- We recommend reading through the installation instructions in whole before performing the work.
- Estimated Installation Time: **.5 Hours**
****This installation requires 2 people for best results****

You will need the following tools:

- Ratchet
- 7/32" Allen Wrench or Allen Socket
- 9/16" Wrench

Included in Kit:

- 1** - Button Head Bolt (3/8"-16 x 1")
- 1** - U-Nut (3/8"-16)
- 1** - License Plate Mounting Bracket

****This installation must be done before the bumper is installed on the vehicle****

Installation:

1. Remove the upper center skid plate bolt on your HoneyBadger front bumper. (Fig A)

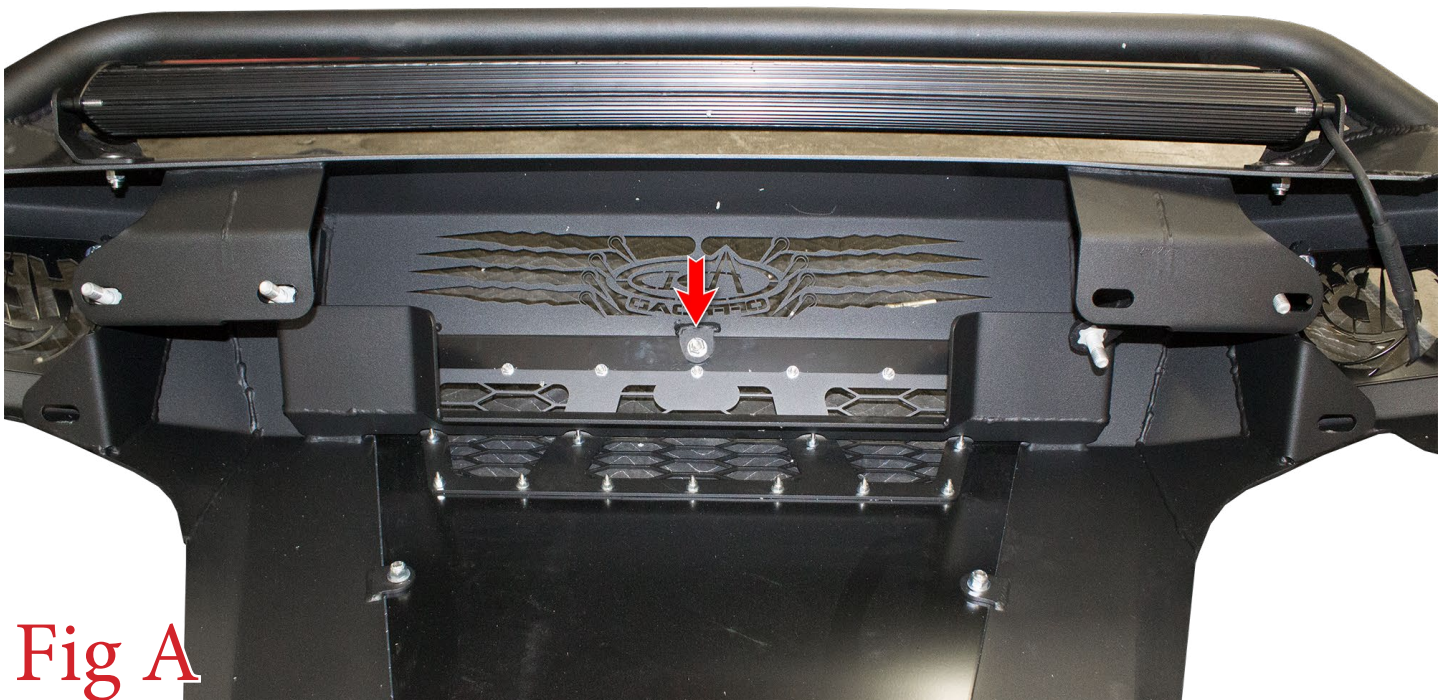


Fig A

- Slide the supplied U-Nut (x1) into place in the now empty skid plate mounting hole. (Fig B)

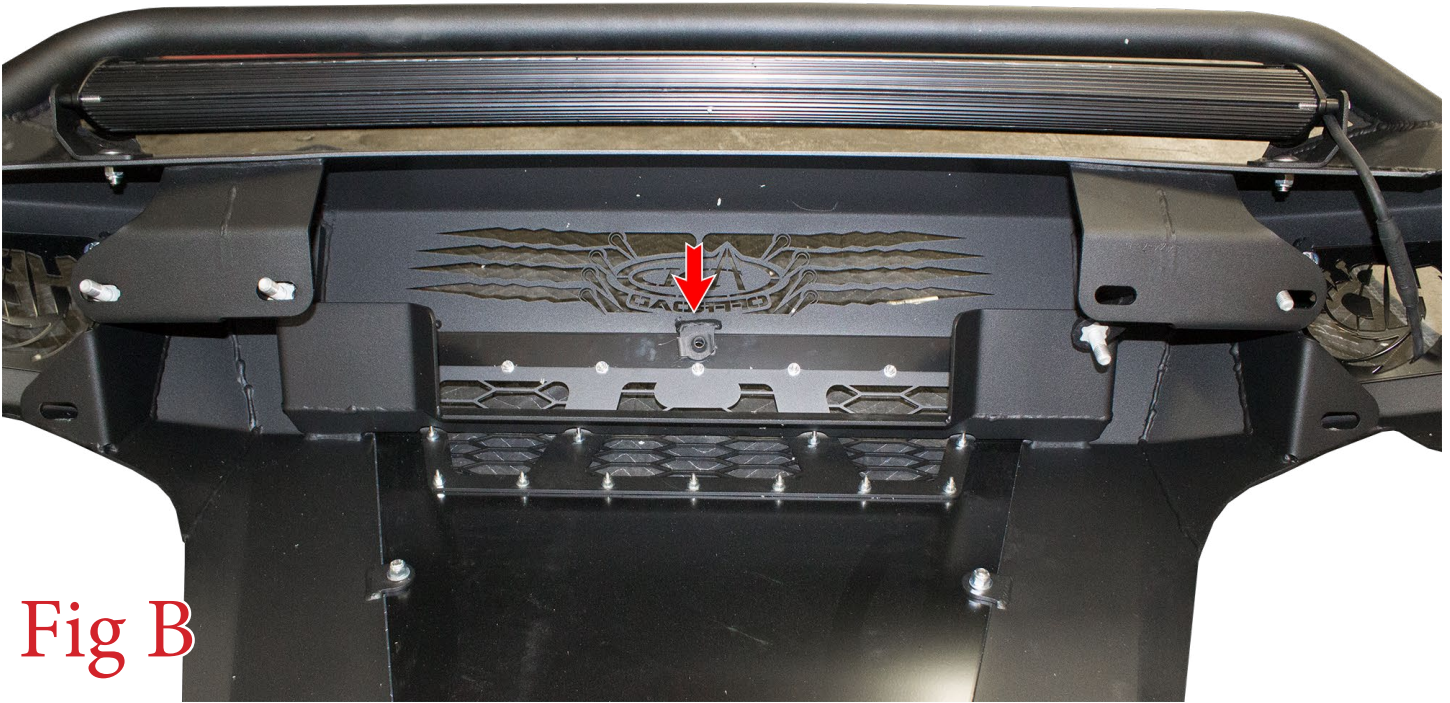


Fig B

- Set the license plate bracket in place on the front of the bumper. Then, use the supplied 3/8" Bolt (x1) to hold it in place. Torque this bolt to 20 foot pounds. (Fig C)

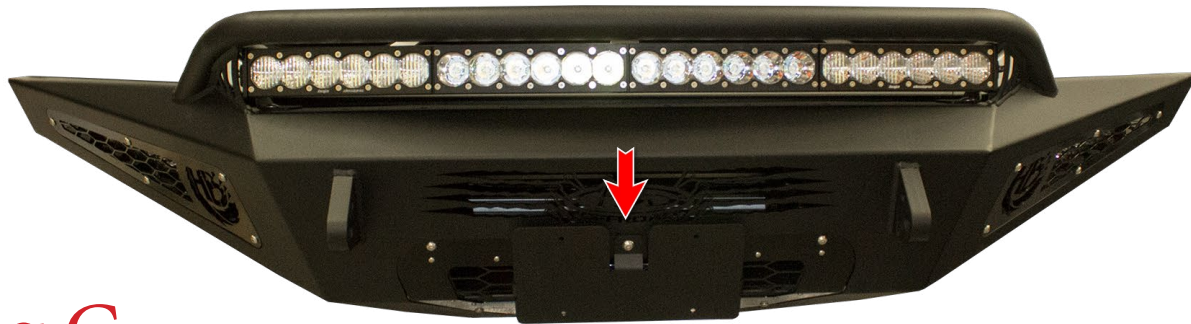


Fig C

- Stand back and enjoy your new Front License Plate Bracket.
- Check and re-tighten, if needed, all mounting bolts after 100 miles and periodically thereafter.

For Additional Support or Technical Questions,
Please Call 480-671-0820 or
Email Info@AddictiveDesertDesigns.com