


# DV8 OFFROAD LBJL-01

## 50" OVERHEAD A-PILLAR LIGHT BAR BRACKET INSTRUCTIONS

1. Begin by removing the 3 factory bolts for the JL cowl on each side.

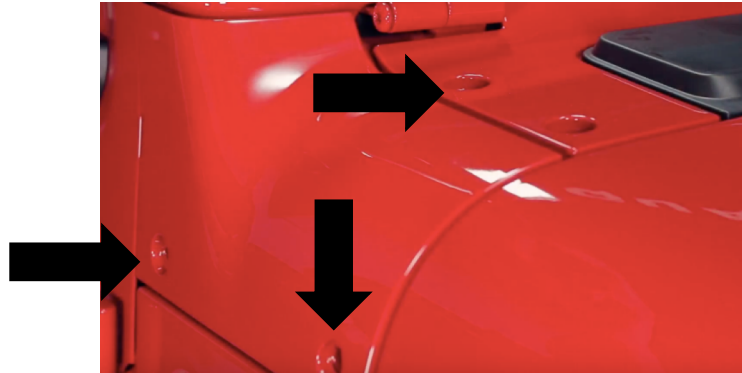

2. Install each side of the light bar brackets using the factory hardware.

**NOTE:** If the bolts have trouble catching the threads, firmly press down on the brackets until the bolts begin to catch.

3. Tighten the bolts firmly.

4. Install a 50" straight light bar utilizing hardware from the light.

5. To run the wire, slightly loosen up the bolts on the side where the wire will be ran. This will allow you to run the wire under the bracket and down the A-pillar.



Optional: Prior to installation, you can use single sided sticky foam ( $\frac{1}{4}$ "") to cushion between the bracket and the Jeep.

If you have any questions or comments, please feel free to call us at (951) 680-9595 or email [info@dv8offroad.com](mailto:info@dv8offroad.com)