

## GX460 REAR INTERIOR MOLLE PANEL

2010-2022 LEXUS GX460  
MPGX-02



### TOOLS REQUIRED

- Ratchet
- 10mm Wrench
- 10mm Socket
- 4mm Allen Bit
- Trim Clip Removal Tool

### SKILL LEVEL

- Novice/Intermediate
  - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself, however additional help will be useful

### TIME REQUIRED

- 2 Hour
- Time to install this should only take about two hours.

## WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: 855-680-9595

*DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.*

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information*

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover




# INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included.

## HARDWARE INCLUDED

- (2) M6x25 Allen Head
- (18) M6x16 Allen Head
- (2) M6x12 Allen Head
- (44) M6 Flat Washers
- (18) M6 Nylon Lock Nuts

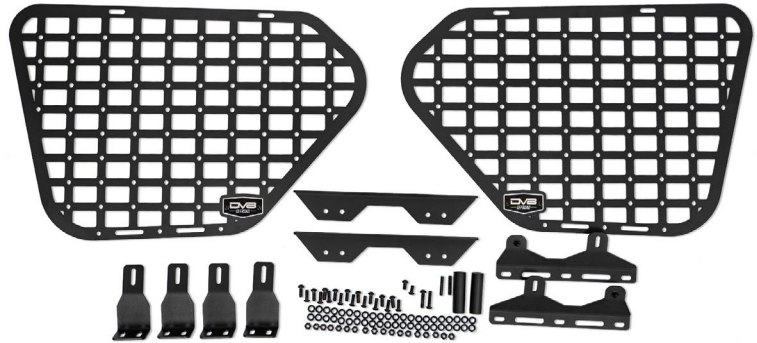

**STEP 1** | These instructions are for the passenger side of the vehicle.


Install the larger “L” shaped bracket on the side of the molle panel that does not show the DV8 logo. Loosely secure using provided M6x16 hardware with a 10mm wrench and 4mm allen bit.

*Tip: M6x16 is the second shortest hardware in the kit. The shortest will be used near the end of the install.*




# INSTALLATION MANUAL

**STEP 2 |** Install the lower brackets on the side that does not show the DV8 logo. Loosely secure using provided M6x16 hardware with a 10mm wrench and 4mm allen bit. Notice the rubber bumpers orientation in relation to the DV8 logo.

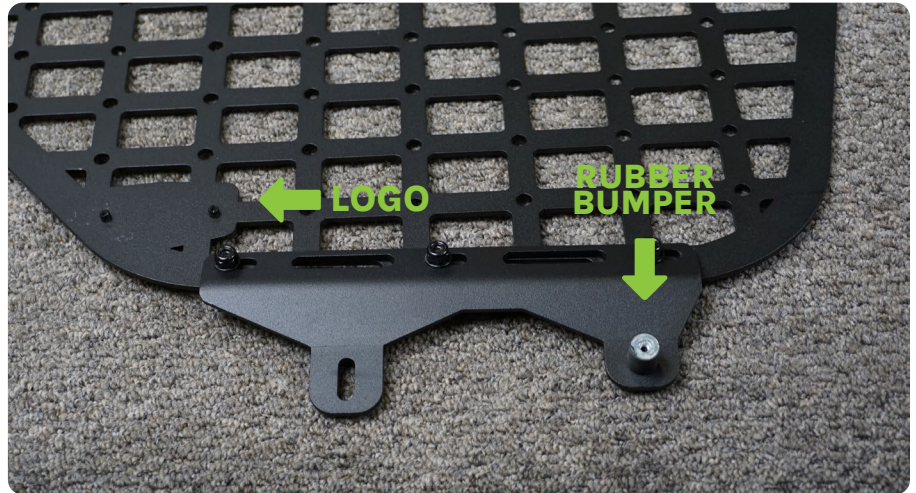

**STEP 3 |** Install the smaller "L" brackets onto the upper bracket and secure using provided M6x16 hardware with a 4mm allen bit and 10mm wrench.

Note: The bend shown in the circles should face towards the logo side.

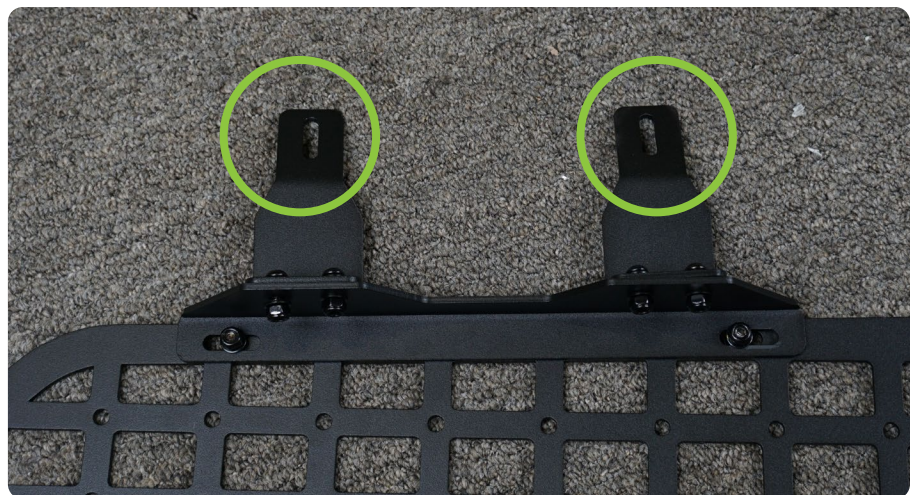

# INSTALLATION MANUAL

**STEP 4** | The aluminum spacer has two places to insert hardware. Identify the deeper side and secure the provided threaded post using a 4mm Allen bit.

Tip: You may choose to use a small amount of superglue or locktite for increased strength.



**STEP 5** | Moving to the vehicle, undo the clips for the grab bar handles located above the rear window and remove the hardware using a 10mm socket. Save the hardware for later use.



# INSTALLATION MANUAL

**STEP 6 |** Remove the plastic trim cover located under the rear window using a trim clip removal tool. Remove the hardware using a 10mm socket.

Insert the spacer using the threaded post from step 4.




**STEP 7 |** Loosely secure the molle panel into place using a 10mm socket and the factory hardware.





# INSTALLATION MANUAL

**STEP 8** | Secure the bottom of the molle panel to the spacer using the provided M6x12 (shortest) hardware and a 4mm allen bit.

Finish securing the top of the molle panel using a 10mm socket.

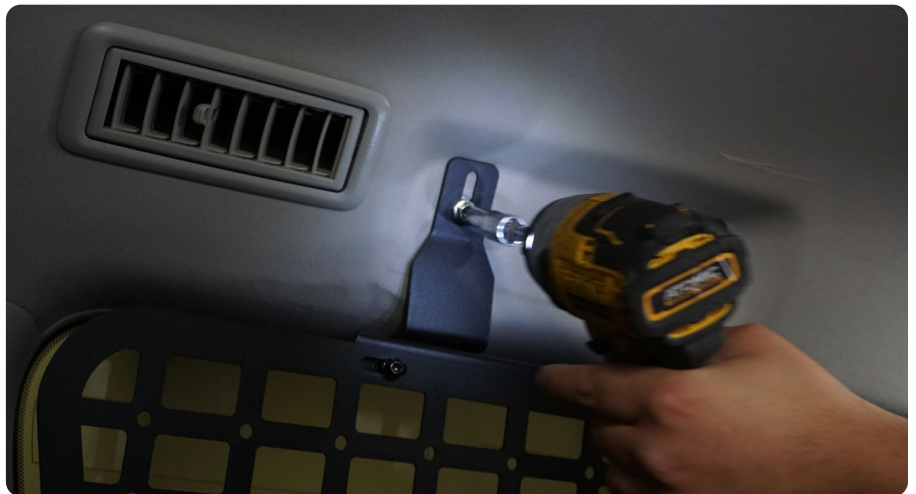

**STEP 9** | Finish securing the bottom and lower brackets to the molle panel. Repeat steps 1-9 for the driver side of the vehicle.

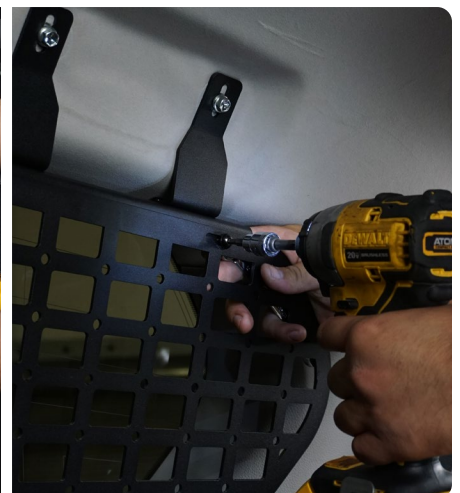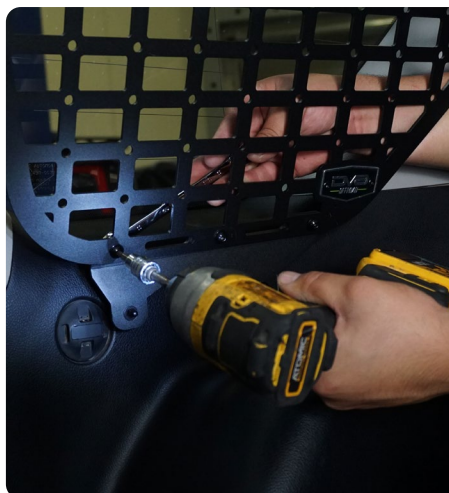

# INSTALLATION MANUAL

---

**STEP 10** | Double check fitment and all hardware is secure. Congratulations, you are finished with the install of the GX460 Rear Interior Molle Panels!

