

## FOOT PEGS

21+ FORD BRONCO

STBR-01



### TOOLS REQUIRED

- 13mm Deep Socket
- #5 Allen Bit

### SKILL LEVEL

- Novice/Intermediate
- 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful

### TIME REQUIRED

- .5 Hour

Time to install this should only take about half an hour.

## WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: 855-680-9595

*DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.*

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information*

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover




# INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

## HARDWARE INCLUDED

- (2) M8x16 Allen
- (2) M8 Flat Washer

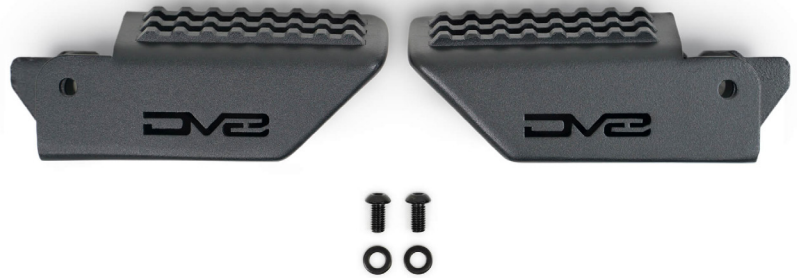

**STEP 1** | Roll down the window on the doors prior to removal.



# INSTALLATION MANUAL

**STEP 2** | Unplug the wiring harness for the door by lifting clasp away from the plug and pulling on the connector.



## INSTALLATION MANUAL

**STEP 3** | Use a 13mm deep socket to remove the factory hardware securing the door to the vehicle.

Then, remove the door and store it on a soft surface where it will not be damaged.

*Note: Assistance is recommended to prevent injury or damage to the product and vehicle.*



**STEP 4** | Slip the foot peg into place and loosely secure with the provided M8 hardware.



# INSTALLATION MANUAL



**STEP 5** | Hold the foot peg in the desired position and tighten the M8 hardware with a #5 allen bit.



**STEP 6** | Congrats! You are finished with the install of 21+ Bronco Foot Pegs

