

Product Number: T2850, U2850 Application: '14 Toyota Tundra

SAFETY

Your safety and the safety of others is very important.

- In order to help you make informed decisions about safety, we have provided installation instructions and other information.
- These instructions alert you to potential hazards that could hurt you or others.
- Please do a job safety analysis (JSA) before each task to identify potential hazards for your situation and remove/protect against them.
- You must use your own good judgment, and take your time.

Read and understand all safety precautions and instructions before installing this product.

THIS PRODUCT IS FOR OFFROAD USE ONLY. ALL LIABILITY FOR INSTALLATION AND USE RESTS WITH THE OWNER.

CARELESS INSTALLATION AND OPERATION CAN RESULT IN SERIOUS INJURY OR EQUIPMENT DAMAGE.

Injury hazard

Failure to observe these instructions could lead to severe injury or death.

- Always remove jewelry and wear eye protection.
- Always use extreme caution when jacking up a vehicle for work. Set emergency brake and use tire blocks. Locate and use the vehicle manufacturers designated lifting points. Use jack stands.
- Always use appropriate and adequate care in lifting components into place.
- **Always** insure components will remain secure during installation and operation.
- Always wear safety glasses when installing this kit. A drilling operation will cause flying metal chips. Flying chips can cause serious eye injury.
- Always use extreme caution when drilling on a vehicle. Thoroughly inspect the area to be drilled (on both sides of material) prior to drilling, and relocate any objects that may be damaged.
- **Always** use extreme caution when cutting and trimming during fitting.
- Always tighten all nuts and bolts securely per installation instructions.
- Always route electrical cables carefully. Avoid moving parts, components that become hot and rough or sharp edges.
- **Always** insulate and protect all exposed wiring and electrical terminals.
- □ Always perform regular inspections and maintenance on mounts and related hardware.





Product Number: T2850, U2850 Application: '14 Toyota Tundra

I. Overview

Congratulations on your new purchase of the industries' best and most stylish Rear Bumper available for the 2014+ Toyota Tundra! This Bumper has been **engineered** for strength while keeping the weight down.

Your Rear Bumper designed in 3-D from digitized data, CNC laser cut, fabricated, and powder coated... all in the U.S.A.

Enjoy the fit and finish of a quality Toyota Tundra Rear Bumper from Fab Fours Inc.





Copyright 2008 Fab Fours, Inc.

Page 2 of 9



Product Number: T2850, U2850 Application: '14 Toyota Tundra

Tools Required

- Socket Wrench with Extension
- 3/4", 12mm, & 19mm Sockets (ratcheting wrenches may also be convenient)
- 3/4", 12mm , & 11/32" Box End Wrenches
- 3/32" Allen Wrench
- Flat and Phillips Head Screw Drivers
- Floor Jack and wood block.

II. Removal of Stock Bumper

A. Disconnect the harness on the back side of the license plate lights from the main connector on the truck frame.

B. Remove your license plate from the OEM Bumper.

C. Remove the plastic corner pieces from the top of the OEM bumper by pulling up from the outside edge. If the plastic is being stubborn during removal the plastic clips can be popped loose from the bottom side of the bumper.(Figure 1)







Copyright 2008 Fab Fours, Inc.

Page 3 of 9



Product Number: T2850, U2850 Application: '14 Toyota Tundra

D. Remove the Phillips head screw passing through the plastic that was hidden by the license plate previously. See Image Below.



Figure 2

E. Pop the plastic clips loose on the bottom side of the main piece of plastic on the top side of the bumper allowing access to the OEM fasteners.

F. Using a 12mm wrench remove the eight OEM fasteners holding the OEM bumper shells to the receiver hitch.





Copyright 2008 Fab Fours, Inc.

Figure 3

Page 4 of 9



Product Number: T2850, U2850 Application: '14 Toyota Tundra

G. Remove the OEM bumper shells and set aside.

H. Your Tuck is now ready for the installation of your new Fab Fours Rear Bumper!

III.Rear Bumper Installation

NOTE: The Following Installation steps apply to the installation of the Rear Bumper. PLEASE READ THE ENTIRE MANUAL BEFORE ATEMPTING INSTALLATION! Ignoring these steps will increase your probability of scratching the vehicle during product Installation!

A. Remove the Bumper from the shipping carton. Lay all items out on a blanket to prevent damage to the powder coating.



Figure 4

B. Install license plate inserts, backup sensor grommets with plugs, trailer plug (Ref. Figure5 a-c), tag light (Ref. Figure 6a-b).



Copyright 2008 Fab Fours, Inc.

Page 5 of 9



Product Number: T2850, U2850 Application: '14 Toyota Tundra

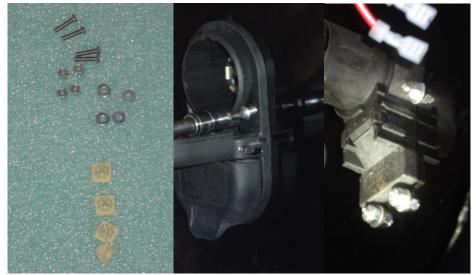


Figure 5a

Figure 5b

Figure 5c



Figure 6a

Figure 6b

C. Insert backup light into grommet (Ref. Figure 7a), then insert grommet into slot remembering to raise lip for secure fit (Ref. Figure 7b).



Copyright 2008 Fab Fours, Inc.

Page 6 of 9

T2850_REV_A



Product Number: T2850, U2850 Application: '14 Toyota Tundra



D. Disconnect the factory harness from the OEM bumper. Attach wiring to lights, sensors (if available), and trailer plug. Wire the backup lights as desired. Use zip-ties to secure excess wiring. Do not connect until Fab Fours bumper is installed.

E. Install supplied intermediate mounting brackets to the hitch frame plate using 19mm socket and wrench and fasteners supplied in hardware kit. Complete on both driver and passenger sides of vehicle. Do Not Fully Tighten; leave as much play as possible until bumper is properly positioned. See Image Below.



Figure 8



Copyright 2008 Fab Fours, Inc.

Page 7 of 9

T2850_REV_A



Product Number: T2850, U2850 Application: '14 Toyota Tundra

F. With the help of two friends and possibly a floor jack to help support the center of the bumper lift the Fab Fours bumper into place.

G. With the bumper held in place insert stud plates through slots in internal mounting tower, plates should face toward bumper. Leave studs as loose as possible. Tighten top stud plates and then repeat process with lower plates. See Image Below.



Figure 9

H. Align the bumper side to side and top to bottom to ensure a perfect fit to the truck. Allow for a 0.375" clearance to all painted surfaces if possible to allow for frame flex.

I. Check that the tailgate does not interfere with the bumper by opening it very carefully and lowering it into place. If tailgate is to close to the bumper, adjust bumper lower.

J. Fully tighten all fasteners between bumper and brackets



Copyright 2008 Fab Fours, Inc.

Page 8 of 9



Product Number: T2850, U2850 Application: '14 Toyota Tundra

and brackets and frame.

K. Install supplied license plate plastic nut inserts and license plate.

L. Enjoy your New Rear Replacement Bumper from Fab Fours!


IV. Maintenance/Care

- □ Periodically check and tighten all fasteners.
- Stripped, fractured, or bent bolts or nuts need to be replaced.
- After washing of the vehicle make sure to fully dry all surfaces

V. Contact Information

Fab Fours Inc. 1312 Camp Creek Rd Lancaster, SC 29720

Phone	(866)-385-1905
Fax	(866)-574-1424
Email	Support@fabfours.com

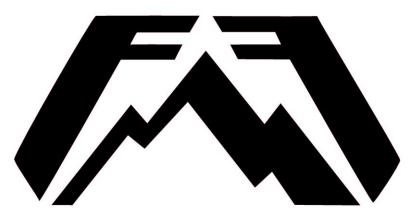

More than expected... Better than expected



Copyright 2008 Fab Fours, Inc.

Page 9 of 9

T2850_REV_A