


Thank you for purchasing this ICON Vehicle Dynamics product. Please read through this entire document before proceeding with installation. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Check your packages immediately upon arrival to ensure that everything listed is included, and to check for damage during shipping. If anything is missing or damaged, or if you need technical assistance with any aspect of this installation, call (951) 689-ICON as soon as possible.

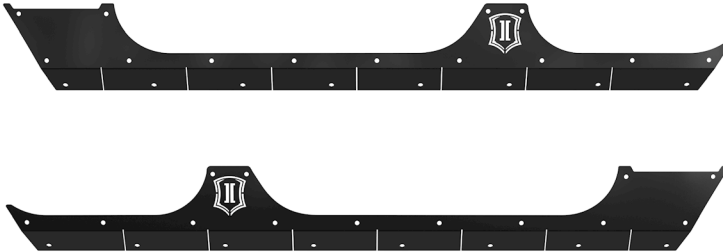

**APPLICATION**

These installation instructions apply to the following products:

25230 07-18 JK 4DR BODY ARMOR

**COMPONENTS INCLUDED**

- (1) JK 4-Door Body Armor - Left
- (1) JK 4-Door Body Armor - Right

**HARDWARE INCLUDED**

- (42) 5/16-18 X 1 SS Flat Head Cap Screw
- (42) 5/16-18 Rivet Nut
- (1) 5/16-18 Rivet Nut Install Tool - Includes:
  - (1) 5/16-18 X 2 Gr8 Hex Head Cap Screw
  - (2) 5/16 Gr8 SAE Flat Washer
  - (1) 3/8-16 X 1-1/8 Coupling Nut
  - (1) 5/16-18 Rivet Nut

**TECH NOTES**

*NOTE: These installation instructions are based on a clean installation on to a stock 2007-2018 Jeep JK Wrangler. Previously modified vehicles may require additional steps.*

**TOOLS REQUIRED**

- Ratchet with extension, 13mm & 18mm sockets
- 3/16" & 7/32" hex key (Allen wrench) or hex driver socket
- 10mm, 1/2" & 5/8" combination wrench
- Rivet Nut (Nut-Sert) Installation Tool (included) or professional rivet nut tool (optional)
- Drill motor with 3/8" & 17/32" drill bits
- Masking tape and touch-up paint

**IMPORTANT NOTICES - PLEASE READ FIRST**

- ✓ **READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! IF THESE INSTRUCTIONS ARE NOT PROPERLY FOLLOWED SEVERE FRAME, SUSPENSION AND TIRE DAMAGE MAY RESULT TO THE VEHICLE!**
- ✓ **ICON VEHICLE DYNAMICS RECOMMENDS ALL INSTALLATION TO BE PERFORMED BY A PROFESSIONAL SHOP/SERVICE TECHNICIAN. PRODUCT FAILURE CAUSED BY IMPROPER INSTALLATION WILL NOT BE COVERED UNDER ICON'S WARRANTY POLICY.**

**INSTALLATION INSTRUCTIONS**

1. Ensure the vehicle is placed on a flat, level surface with the transmission in PARK, the tires chocked, and the emergency brake ON. Wear safety glasses from this point forward.
2. Remove any OE or previously installed external rocker rails, nerf bars or running boards. If they are compatible with the Body Armor they may be reinstalled later, but removing them now will make the Body Armor installation easier.
3. Apply masking tape on to the Jeep's body tub sheet metal where the Body Armor will attach. While this step isn't absolutely necessary, it is recommended in order to protect the Jeep's paint from scratches during the installation process.



FIG. 2



4. With the help of a friend, hold the Body Armor panel up to the body of the Jeep as shown in the photo below. The Body Armor will fit into place vertically by interfacing with the curve of the body. For horizontal alignment, visually ensure that the edges of the Body Armor are aligned with the door cutouts of the Jeep, with a uniform alignment from end to end. There should be about a 3/8" gap around the bottom edge of the door and the Body Armor.

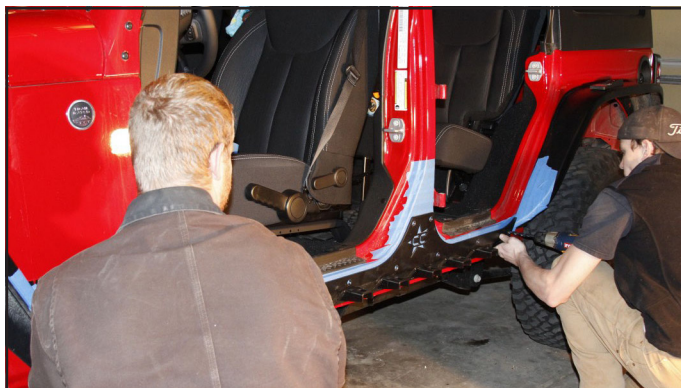


FIG. 3

5. While holding the Body Armor in place, use the drill motor with 3/8" bit to drill ONLY ONE 3/8" hole in the rearward most hole. Set the Body Armor aside.
6. Switch to a 17/32" bit and enlarge the hole started in the previous step to 17/32". Apply touch-up paint to the newly exposed metal around the edge of the hole to prevent it from rusting.
7. Install a 5/16-18 Threaded Rivet Nut (Nut-Sert) into the newly drilled hole. If a dedicated rivet-nut installation tool is not available, use the simple tool that is included in the hardware kit, following the instructions in the section titled "SUPPLEMENT: USING THE RIVET-NUT TOOL."
8. With the help of a friend, hold the rock rail Body Armor panel up to the body of the Jeep again. Install a 5/16-18 X 1 SS Flat Head Socket Cap Screw into the rear-most hole in the Exo Skin and thread it into the rivet nut installed in the previous steps.
9. While continuing to hold the Exo Skin in place use the drill motor with 3/8" bit to drill ONLY ONE 3/8" hole in the forward-most hole. Remove the Exo Skin once again and set it aside.

**SUPPLEMENT: USING THE RIVET-NUT TOOL**

*It is recommended to use a dedicated rivet-nut installation tool if one is available, however the process can be performed using the simple "tool" included in the hardware kit. The included tool consists of a bolt, two washers and a coupler (long) nut:*



**A.** Begin by slipping a washer on to the bolt, followed by the coupler nut, followed by the second washer. Thread the rivet-nut you wish to install on to the end of the bolt and snug it up to the washer, then back it off a quarter turn so that the washers and coupler nut can spin freely on the bolt.

**B.** Insert the knurled end of the rivet-nut into the hole, pressing its flange firmly against the Jeep's sheet metal. Use an end wrench to hold the coupler nut stationary while turning the head of the bolt clockwise with a ratchet and socket. As the ratchet is turned, the bolt will draw the far end of the rivet-nut toward the inside of the sheet metal, gripping it with the knurled outside edge of the nut-sert as it deforms.



IMAGE MAY NOT MATCH THIS PART INSTALLATION. IT IS FOR ILLUSTRATION OF THE USE OF THE TOOL ONLY.

**C.** Continue to turn the ratchet until the rivet-nut is fully seated. **DO NOT OVER-TIGHTEN** as you can damage the nut-sert, or cause it to lose its grip.

**D.** Once the nut-sert has seated correctly, loosen the bolt then remove it and the rest of the tool from the nut-sert.

**E.** Install a new rivet-nut onto the tool, oriented the same as the last, and set it aside until your next nut-sert installation.

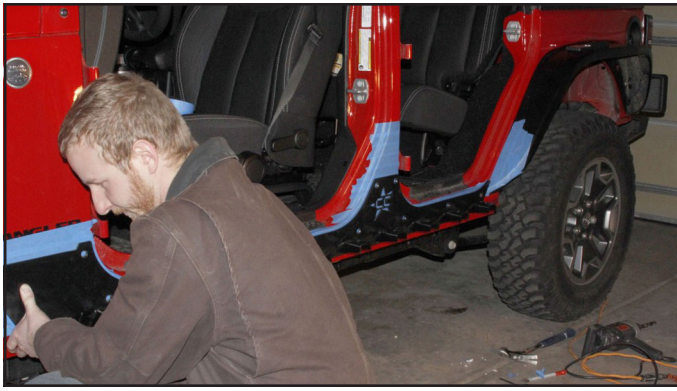


FIG. 4

Once all fasteners have been started, finish tightening each of them.

17. Repeat the installation procedure for the opposite side of the vehicle.
18. Reinstall any external rocker rails or nerf bars that were removed prior to installation, if they are compatible with the ICON Impact Body Armor.

*Congratulations! Your installation is complete.*

**RETORQUE ALL NUTS, BOLTS AND LUGS AFTER 100 MILES AND PERIODICALLY THEREAFTER.**

10. Switch to a 17/32" bit and enlarge the hole started in the previous step to 17/32". Apply touch-up paint to the newly exposed metal around the edge of the hole to prevent it from rusting.
11. Re-install the Body Armor panel using two 5/16-18 X 1 SS Flat Head Socket Cap Screws into the two rivet nuts installed so far.
12. Use the drill motor with 3/8" bit to drill the remaining hole locations. Remove the Body Armor once again and set it aside.
13. Switch to a 17/32" bit and enlarge the holes started in the previous step to 17/32". Apply touch-up paint to the newly exposed metal around the edge of each hole to prevent it from rusting.
14. Install a 5/16-18 Threaded Rivet Nut (Nut-Sert) into each of the newly-drilled 17-32" holes.
15. Remove any remaining masking tape that was applied at the beginning of the installation process.



FIG. 5

16. With the help of a friend, carefully hold the Body Armor up to the body of the Jeep again and attach it using the included 5/16-18 X 1 SS Flat Head Socket Cap Screws. Do not tighten any of the fasteners until they have all been started.





**LIMITED LIFETIME WARRANTY**

*ICON Vehicle Dynamics warrants to the original retail purchaser who owns the vehicle on which the product was originally installed. ICON Vehicle Dynamics does not warrant the product for finish, alterations, modifications and/or installation contrary to ICON Vehicle Dynamics instructions. ICON Vehicle Dynamics products are not designed, nor are they intended to be installed on vehicles used in race applications, for racing purposes or for similar activities. (A "race" is defined as any contest between two or more vehicles, or a contest of one or more vehicles against the clock, whether or not such contest is for a prize). This warranty does not include coverage for police or taxi vehicles, race vehicles, or vehicles used for government or commercial purposes. Also excluded from this warranty are sales outside of the United States of America and Canada.*

*ICON Vehicle Dynamics' obligation under this warranty is limited to the repair or replacement, at ICON Vehicle Dynamics' discretion, of the defective product. Any and all costs of removal, installation or re-installation, freight charges and incidental or consequential damages are expressly excluded from this warranty. Items that are subject to wear are not considered defective when worn and are not covered.*

*ICON Vehicle Dynamics components must be installed as a complete kit as shown in our current application guide. Any substitutions or exemptions of required components will immediately void the warranty. Some finish damage may happen to parts during shipping and is not covered under warranty.*

*This warranty is expressly in lieu of all other warranties expressed or implied. This warranty shall not apply to any product that has been improperly installed, modified or customized subject to accident, negligence, abuse or misuse.*



**ICON VEHICLE DYNAMICS®**  
PERFORMANCE SUSPENSION SYSTEMS AND SHOCK ABSORBERS

7929 Lincoln Ave. Riverside, CA 92504  
Phone: 951.689.ICON Fax: 951.689.1016  
[www.iconvehicledynamics.com](http://www.iconvehicledynamics.com)



**FOLLOW US ON FACEBOOK!**

