



Protecting Your Adventure Lifestyle

30630 Lift Kit

Warrior recommends this system be installed by a certified technician. In addition to these instructions, professional knowledge of disassembly and reassembly procedures as well as post installation checks must be known. Attempts to install this system without this knowledge and expertise may jeopardize the integrity and/or operating safety of the vehicle.

Please read instructions before beginning installation. Check the kit hardware against the parts diagram. Be sure you have all needed parts and know where they go.

With the installation of all lift kits and larger tires it is important to check the condition of your steering stabilizer. If the stabilizer is worn or is leaking it should be replaced. Steering stabilizers are designed to restrain “bump steering” and front end vibration, giving added life to tires, ball joints, and other steering components. **A large bore off-road stabilizer kit is highly recommended for vehicles equipped with larger tires.**

PRODUCT USE INFORMATION

As a general rule, the taller a vehicle is, the easier it will roll. Offset, as much as possible, what is lost in rollover resistance by increasing tire track width. In other words, go "wide" as you go "tall". Many sportsmen remove their mud tires after hunting season and install ones more appropriate for street driving; always use as wide a tire and wheel combination as possible to enhance vehicle stability.

We strongly recommend, because of rollover possibility, that the vehicle be equipped with a functional roll-bar and cage system. Seat belts and shoulder harnesses should be worn at all times. Avoid situations where a side rollover may occur. Generally, braking performance and capability are decreased when significantly larger/heavier tires and wheels are used. Take this into consideration while driving.

Do not add, alter, or fabricate any factory or after-market parts to increase vehicle height over the intended height of the Rough Country product purchased. Mixing component brands is not recommended.

Warrior makes no claims regarding lifting devices and excludes any and all implied claims. We will not be responsible for any product that is altered.

If question exist we will be happy to answer any questions concerning the design, function, and correct use of our products.

NOTICE TO DEALER AND VEHICLE OWNER

Any vehicle equipped with Warrior Suspension System products should have a “Warning to Driver” decal installed on the inside of the windshield or on the vehicle’s dash. The decal should act as a constant reminder for whoever is operating the vehicle of its unique handling characteristics.

INSTALLING DEALER - it is your responsibility to install the warning decal and forward these installation instructions on to the vehicle owner for review. These instructions should be kept in the vehicle for its service life.

INSTALLATION INSTRUCTIONS

1. Raise the front of the vehicle and support with safety stands.
2. Remove the front wheels and tires. Remove stock shocks.
3. Support the front axle housing with a floor jack (you must have stands under frame supporting vehicle weight).
4. Unbolt tracking bar from the housing on the axle and then tie the bar up and out of the way (see figure 3 for relative location).
5. The upper end of the front brake hoses attach to the top of each frame rail with one bolt located directly behind the shock towers (see figure 2). Remove the bolts (access is gained through the engine compartment).
6. Remove the four front spring to axle u-bolts. (The remainder of the spring removal and installation is performed one side at a time.)
7. On the driver side position a floor jack beneath the axle tube, just inside of the leaf spring. Raise the jack until the axle

QUALITY • INTEGRITY • INNOVATION • SERVICE



Protecting Your Adventure Lifestyle

just separates from the spring. Now remove the frame bolts and the shackle bolts on the leaf spring. Repeat on the other side.

8. Prior to installation of new springs, thoroughly lubricate the new spring poly eye bushings and sleeves with “water resistant” lithium based grease. Loosely attach the spring to its hangers, snug up but do not completely tighten yet. Make sure spring centering pin aligns and seas into spring perch hole.
9. While installing new u-bolts, put one bump stop extension snubber on top of axle tubes. (figure 1 shows how the bump-stops are capture by the u-bolt. Tighten u-bolts to 65 ft. lbs. of torque. Tighten spring pivot bolts to 35ft. lbs. on both frame mounts and shackle mounts.
10. To install new tracking bar bracket onto front axle housing, refer to instructions with Front Trac Arm Bracket.
11. Assemble and install new front shock absorbers **Part #60501** (Boot installation and poly hourglass bushing installation can made easier with the use of rubbing alcohol sprayed on the poly as a lubricant.). Tighten upper stem type mounts only until bushings swell slightly, then torque lower mounts to 45 ft lbs.
12. Install new front brake line relocating brackets (#700021) in stock holes reusing the bolts on the frame rail. Pull steel line out from the frame rail (Use caution when rerouting the steel line so you do not kink the line). Mount the line to the bracket using the 5/16” x 1” bolts, washers and flange lock nut. **Note:** There is a driver side and a passenger side bracket as shown in figure 2.
13. Reinstall tires/wheels, remove jack stands and lower vehicle to floor. Tighten the front spring’s shackle to 95 ft. lbs. and the stationary end to 105 ft. lbs. (If kit includes pitman arm, you may want to do pitman arm instructions before proceeding to rear of vehicle)
14. Once again as on the front (following same basic steps). Place safety (jack) stands under rear frame rails.
15. Remove the retainer clip that attaches the stock rubber brake hose to its upper mount bracket. This is where the rubber hose ends and the metal line starts. Insert the new “Z” brackets in between the stock mounting bracket and the hose end. The 5/16” x 1” bolt and flanged lock nut are used to attach the bracket to the bracket end. Position the hose/line through the slot and into the hole on the “Z” bracket’s opposite end and then reinstall clip (See figure 5).
16. Disconnect tracking bar from frame rail. Install new drop down tracking bar mounting bracket (#800005) on housing as shown in figure 4 using provided hardware.
17. Install new springs (#800020) with shims. (torque u-bolts 65 ft. lbs.) Remember to install the bump stop extension snubber on as you did on the front. When installing the springs the thick part of shim goes toward front of jeep. Attach tracking bar to drop down bracket using original 12mm bolt and flange-nut. (torque to 45 ft. lbs.)
18. Assemble the rear shock absorbers (**Part# 60502**) with loop bushings and corresponding sleeves and install shocks. Torque upper and lower mounts to 45-ft. lbs. On some models there may not be adequate clearance between the shock body and the axle tube. In this situation your only option is to relocate the shock bracket.
19. Install tires, remove jack stands, and lower vehicle to floor. Tighten the shackle to 95 ft. lbs. and the frame end to 105ftlbs.
20. Install Transfer Case Spacer Kit following instructions packaged with part #800006.
21. Install Pitman Arm Kit following instructions packaged with part #800016

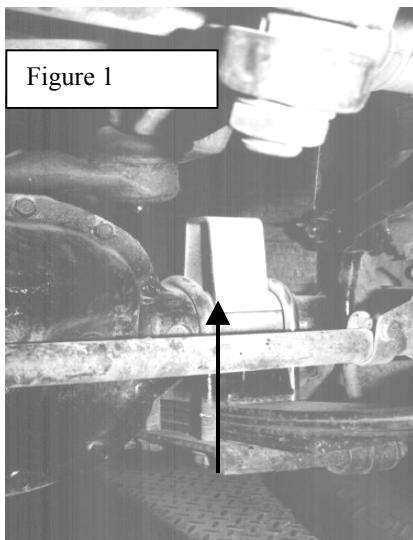


Figure 1





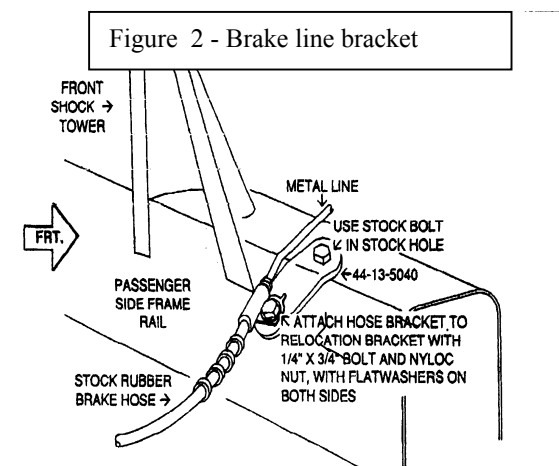


Figure 2 - Brake line bracket

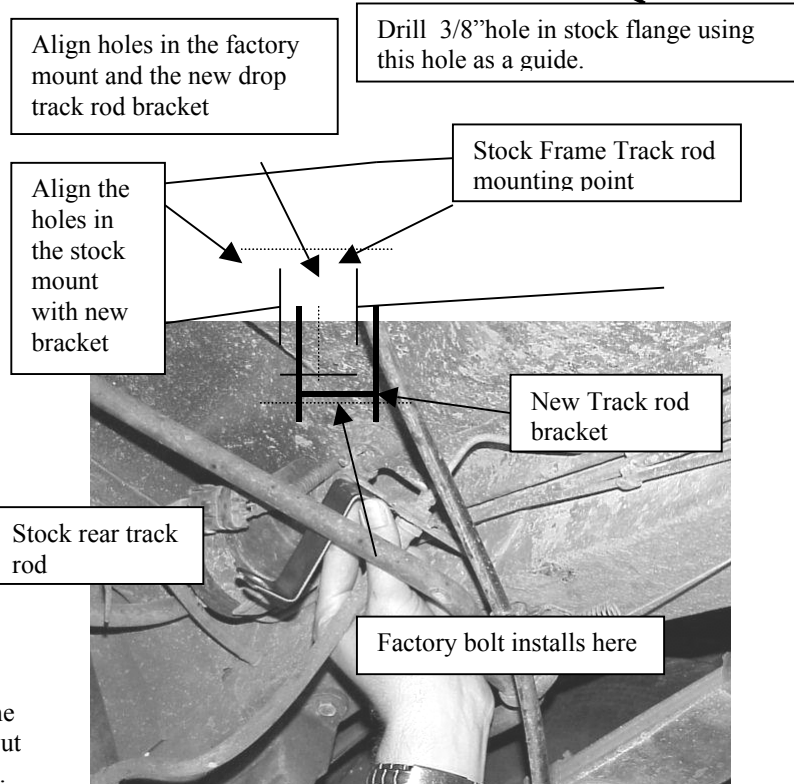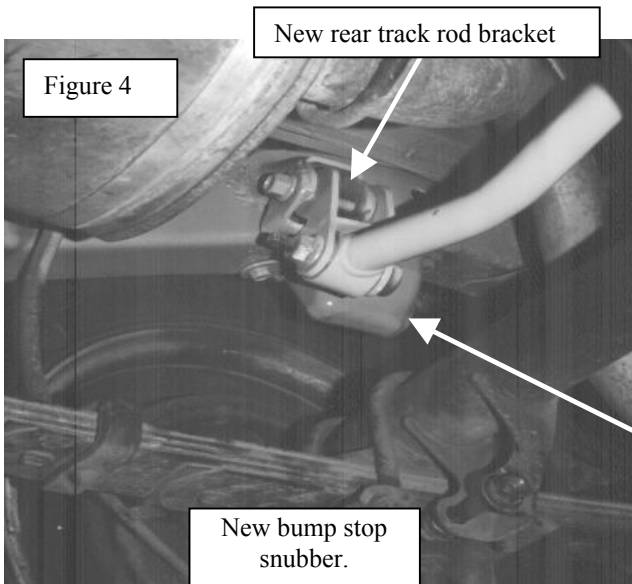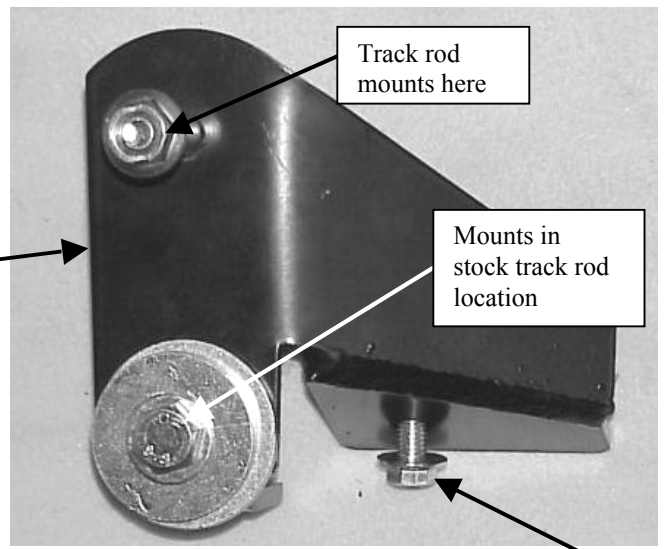

Protecting Your Adventure Lifestyle

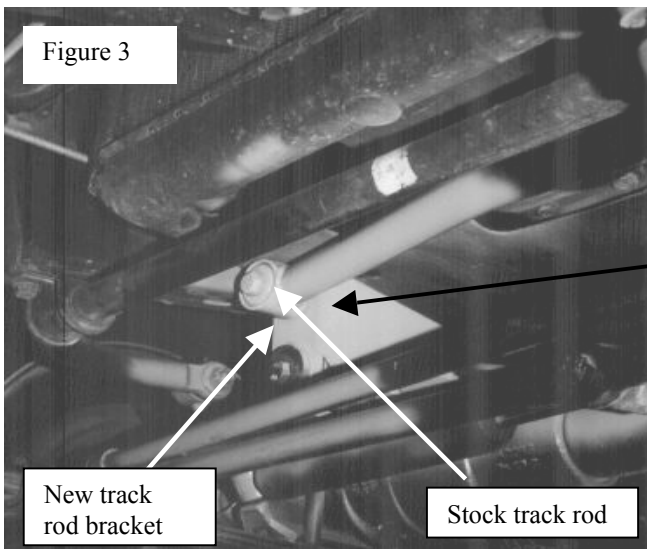

Assemble as shown with brake line bracket mounted to the frame in the stock brake line location. Pull the steel line out from the frame and bolt it in the other hole on the bracket.




Protecting Your Adventure Lifestyle

Remove the brake clip at this location. This will allow the steel line to be pulled out from the frame mount. Install the bracket as shown with a bolt through the small hole of the bracket and stock mounting point.

Then insert the line in the larger end and replace the brake line clip to secure the line in place

ALWAYS USE CAUTION NOT TO PINCH OR BREAK THE STEEL LINE!

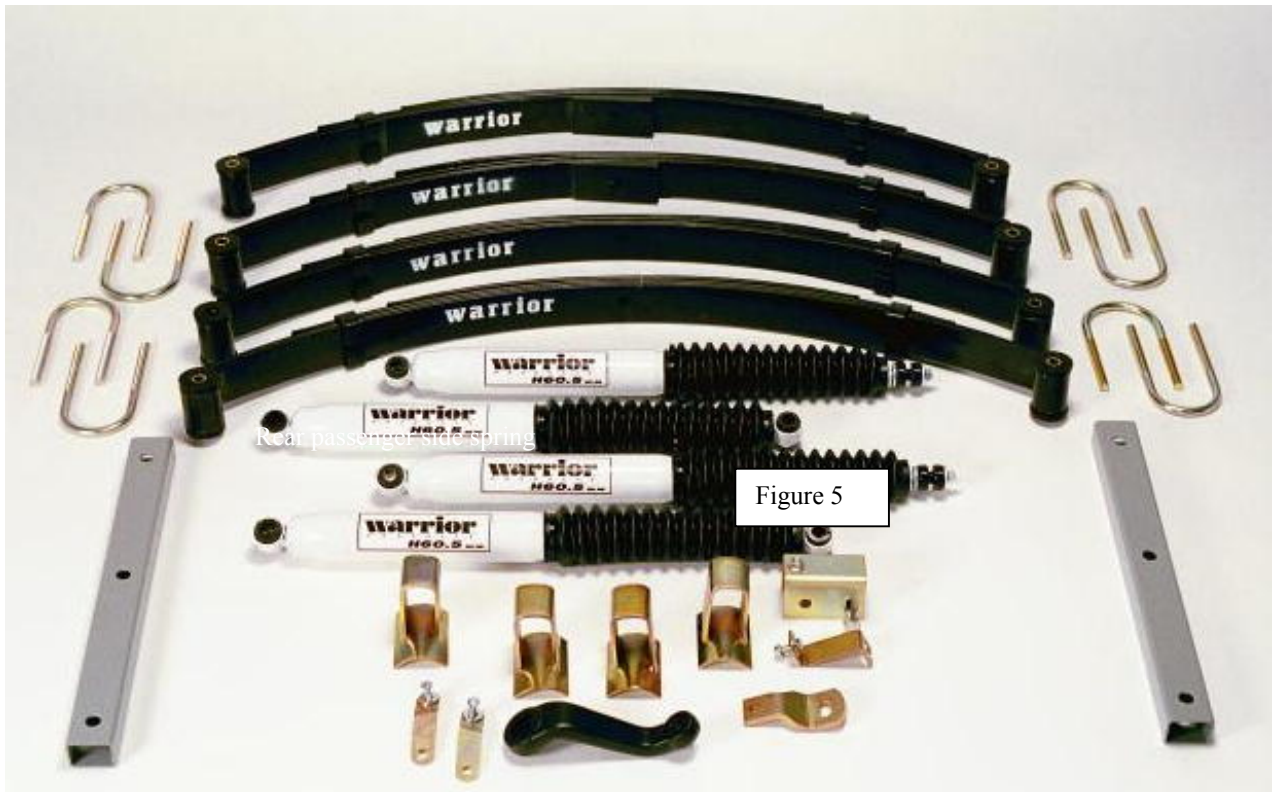



Protecting Your Adventure Lifestyle

Parts List

Front Leaf Springs Kit	Pitman Arm Kit	YJ Bump Stop Bracket Kit	
800019	800016	800003	60501 Front Shocks- 2
			60503 Rear Shocks- 2
Rear Leaf Springs Kit	Transfer Case Spacer Kit	YJ Frnt Trac Arm Brkt Kit	700004 Black Boots-4
800020	800006	800004	700005 Black Cable Tie-4
			700021 Frnt Brk Ln Ext Brkt -2
Front U-Bolts Kit	YJ Frnt Sway Bar Link Kit	YJ Rr Trac Arm Brkt Kit	700022 Rr Brk Ln Ext Brkt -1
800021	800014	800005	BK2141 1 1/2" T-Bushings -8
			BK2048 1 1/2" T-Bushings -8
Rear U-Bolts Kit			1 1/2" x 3" Sleeve -8
800022			

QUALITY • INTEGRITY • INNOVATION • SERVICE

Learn more about performance suspension parts we have.